

Genomic DNA Isolation Kit (Paraffin-embedded tissue)

Cat. No.: SN027-0100 Size: 100 Reactions
 Cat. No.: SN027-0004 Size: 4 Reactions
 Sample: 25 mg of paraffin-embedded tissue
 Format: spin column
 Column capacity: up to 50 µg
 Operation time: within 60 minutes



Description

The Genomic DNA Isolation Kit (Paraffin-embedded tissue) is designed specifically for genomic DNA isolation from animal tissue samples. This unique buffer system ensures total DNA with high yield and good quality from samples. The spin column system is designed and purified or concentrate DNA products which have been previously isolated using buffers.

The entire procedure can be completed in one hour without phenol / chloroform extraction. The isolated DNA is suitable for PCR or other enzymatic reactions.

Features

- Ready-to-use genomic DNA for high performance in any downstream application.
- Optimized lysis buffer for the efficient lysis.
- Designed to rapidly purify high-quality DNA using spin column format.

Applications

- Gene cloning.
- Southern blotting.
- PCR.
- SNP genotyping.

Kit Contents

Contents	SN027-0100	SN027-0004
Buffer TL	35 ml X 1 vial	1.5 ml X 1 vial
Buffer TP	15 ml X 1 vial	0.5 ml X 1 vial
Buffer W1	45 ml X 1 vial	2 ml X 1 vial
Buffer W2 (Add ethanol)	15 ml X 1 vial (60 ml X 1 vial)	300 µl X2 vials (1.2 ml X 2 vials)
Buffer BE	10 ml X 1 vial	1 ml X 1 vial
TC Column	50 pieces X 2 bags	4 pieces X 1 bag
Collection Tube	50 pieces X 2 bags	

Quality Control

The quality of the Genomic DNA Isolation Kit (Paraffin-embedded tissue) is tested on a lot-to-lot basis to ensure consistent product quality.

Required Materials

- Mortar and pestle
- Proteinase K (10 mg/ml)
- Absolute ethanol
- Micropestle
- RNase A (50 mg/ml) (Optional)
- Water bath/ Dry bath
- Isopropanol
- Microcentrifuge tubes
- Xylene

Buffer Preparation

- TE buffer, pH8.0 (Selective): 10 mM Tris-HCl, pH 8.0 with 1 mM EDTA

Genomic DNA Isolation Kit (Paraffin-embedded tissue) Protocol

Step 1 Sample Preparation

1. Slice small sections (up to 25 mg) from blocks of the paraffin-embedded tissue and transfer to a 1.5 ml microcentrifuge tube.
2. Add 1 ml of the xylene to the tube.
3. Vortex vigorously and incubate at the room temperature for approximately 10 minutes.
4. Vortex occasionally during incubation.
5. Centrifuge at 14-16,000 x g for 3 minutes.
6. Remove the supernatant.
7. Add 1 ml of the absolute ethanol to wash the sample pellet and mix by inverting.
8. Centrifuge at 14-16,000 x g for 3 minutes.
9. Remove the supernatant.
10. Add 1 ml of the absolute ethanol to wash the sample pellet again and mix by inverting.
11. Centrifuge at 14-16,000 x g for 3 minutes.
12. Remove the supernatant.
13. Open the tube and Incubate at 37°C for 15 minutes to evaporate any ethanol residue.

Step 2 Lysis

1. Add 300 µl of the Buffer TL and 20 µl of the Proteinase K (10 mg/ml) to the tube from Step 1.
2. Incubate at 60°C for 30 minutes or until the sample lysate is clear.
3. During incubation, invert the tube every 5 minutes.
#Pre-heat the Buffer BE to 60°C for Step 6 DNA Elution.
4. Optional Step:
RNA Degradation (If RNA-free genomic DNA is required, perform this optional step): Add 5 µl of the RNase A (50 mg/ml) to the sample lysate and mix by vortex. Incubate at the room temperature for 5 minutes.

Step 3 Protein Removal

1. Add 100 µl of the Buffer TP to the sample from Step 2 and shake vigorously.
2. Centrifuge at 12,000 x g for 1 minute. (Don't over 1 minute)

Step 4 DNA Binding


1. Place a TC Column in a 2 ml Collection Tube.
2. Transfer the clear supernatant completely from the previous step to the TC Column.
3. Centrifuge at 14,000 x g for 30 seconds.
4. Discard the flow-through and place the TC Column back in the 2 ml Collection Tube.

Step 5 Wash

1. Add 400 µl of the Buffer W1 into the TC Column.
2. Centrifuge at 14,000 x g for 30 seconds.
3. Discard the flow-through and place the TC Column back into the same Collection tube.
4. Add 600 µl of the Buffer W2 (Ethanol added) into the TC Column.
5. Centrifuge at 14,000 x g for 30 seconds.
6. Discard the flow-through and place the TC Column back into the same Collection tube.
7. Centrifuge at 14,000 x g again for 2 minutes to remove residual Buffer W2.

Step 6 DNA Elution

1. Transfer the dried TC Column to a new 1.5 ml microcentrifuge tube.
2. Add 50-200 μ l of the Pre-Heated Buffer BE or TE into the center of the column matrix.
3. Let stand at 60°C for 3 minutes.
4. Centrifuge for 2 minutes at 14,000 x g to elute the purified DNA.

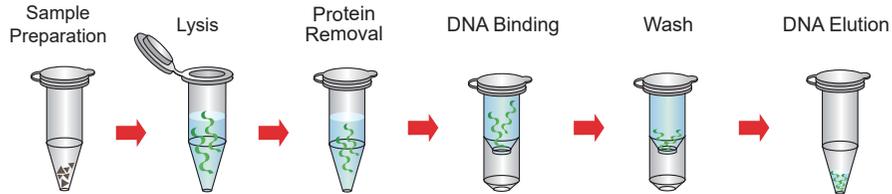

Troubleshooting

Refer to the table below to troubleshoot problems that you may encounter when you did genomic DNA isolation with the kit.

Problem	Cause	Solution
Low yield of DNA	Incomplete lysed sample	Use the appropriate method for the lysate preparation based on the amount of the starting materials.
		Increase the digestion time.
		Make sure that the tissue is completely immersed in the Buffer TL.
	Ethanol not added to Buffer W2	Add ethanol (96-100%) to Buffer W2, and shake before use.
Incorrect elution conditions	Poor quality of starting material	Perform incubation at 60°C for 3 minutes with Buffer BE or TE buffer before centrifugation. To recover more DNA, perform a second elution step.
		Be sure to use fresh sample and process immediately after collection or freeze the sample at -80°C or in liquid nitrogen. The yield and quality of DNA isolated depends on the type and age of the starting material.
DNA degrade	Sample is not fresh	Avoid repeated freeze / thaw cycles of the sample.
		Use a new sample for the DNA isolation. Perform the extraction of the fresh material when possible.
	DNase contaminant	Use the fresh TAE or TBE electrophoresis buffer.
Maintain a sterile work environment to avoid contamination from DNases.		

Related Ordering Information

Cat. No.	Description	Size
SM101-0500	Taq DNA polymerase	500 U
SM201-0100	Hot Star SUPERMIX	100 Reactions
SM255-0100	Ultrapure Proteinase K	100 mg
SA001-0500	AGAROSE Tablet, 0.5g	100 Tablets
SL001-1000	Novel Juice Supplied in 6X Loading Buffer	1 ml
SD010-R600	1 Kb DNA Ladder RTU	600 μ l
SD013-R500	XLarge DNA Ladder RTU	600 μ l
ST040-4000	100 mM dNTP Set	4 x 1 ml

Caution

- During operation, always wear a lab coat, disposable gloves, and protective equipment.
- Check buffers before use for salt precipitation. Redissolve any precipitate by warming to 37°C.
- When using 100 reaction assays, add 60 ml of the ethanol (96-100%) to the Buffer W2, and shake before use.
- When using 4 reaction assays, add 1.2 ml of the ethanol (96-100%) to the each vial of the Buffer W2, and shake before use.
- All products are for research use only.